

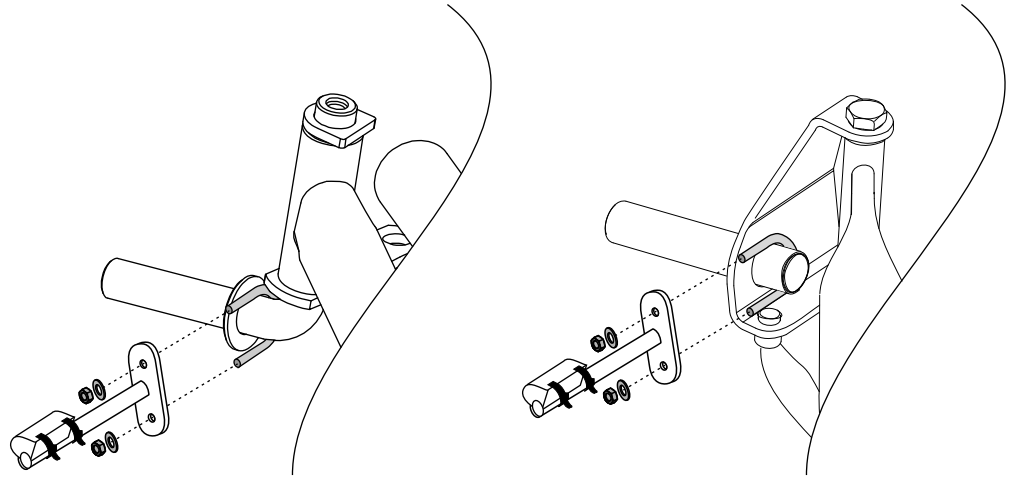




1

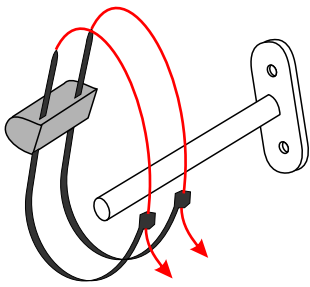


2

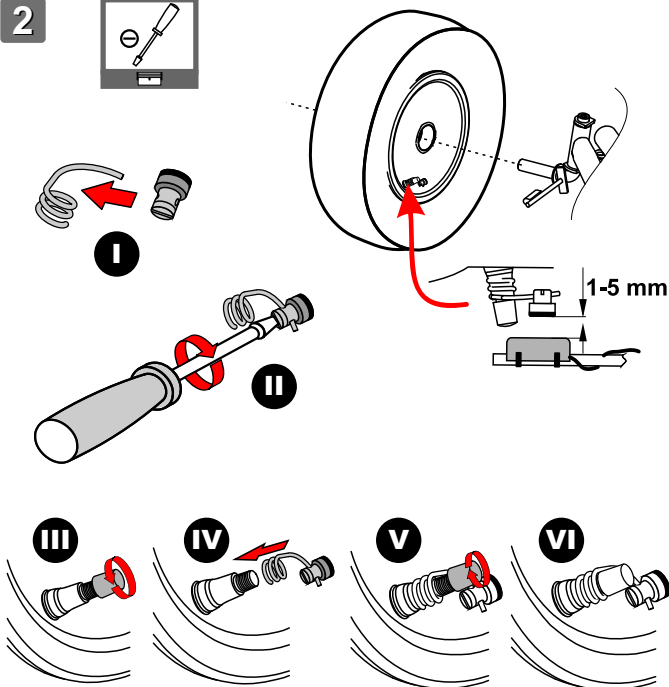

 3a

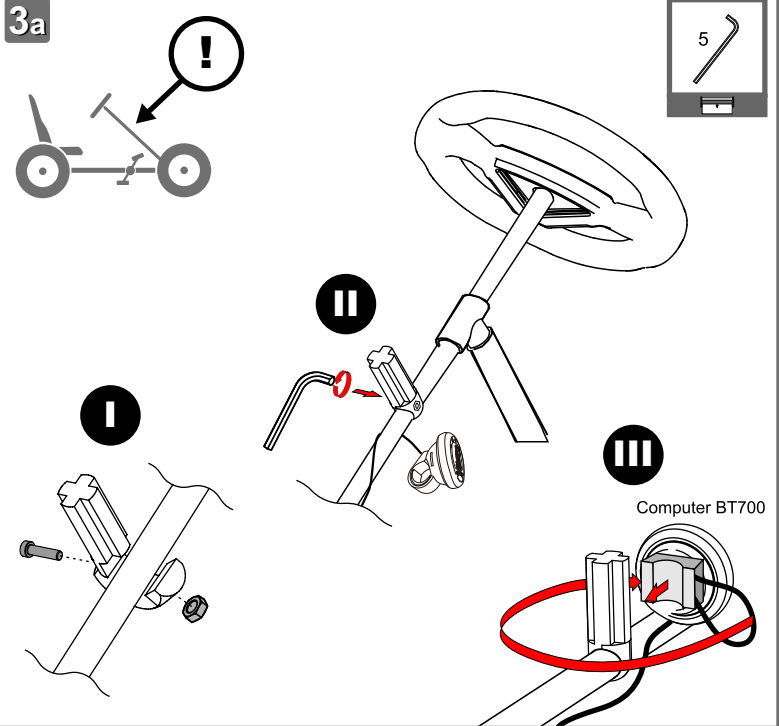

3b

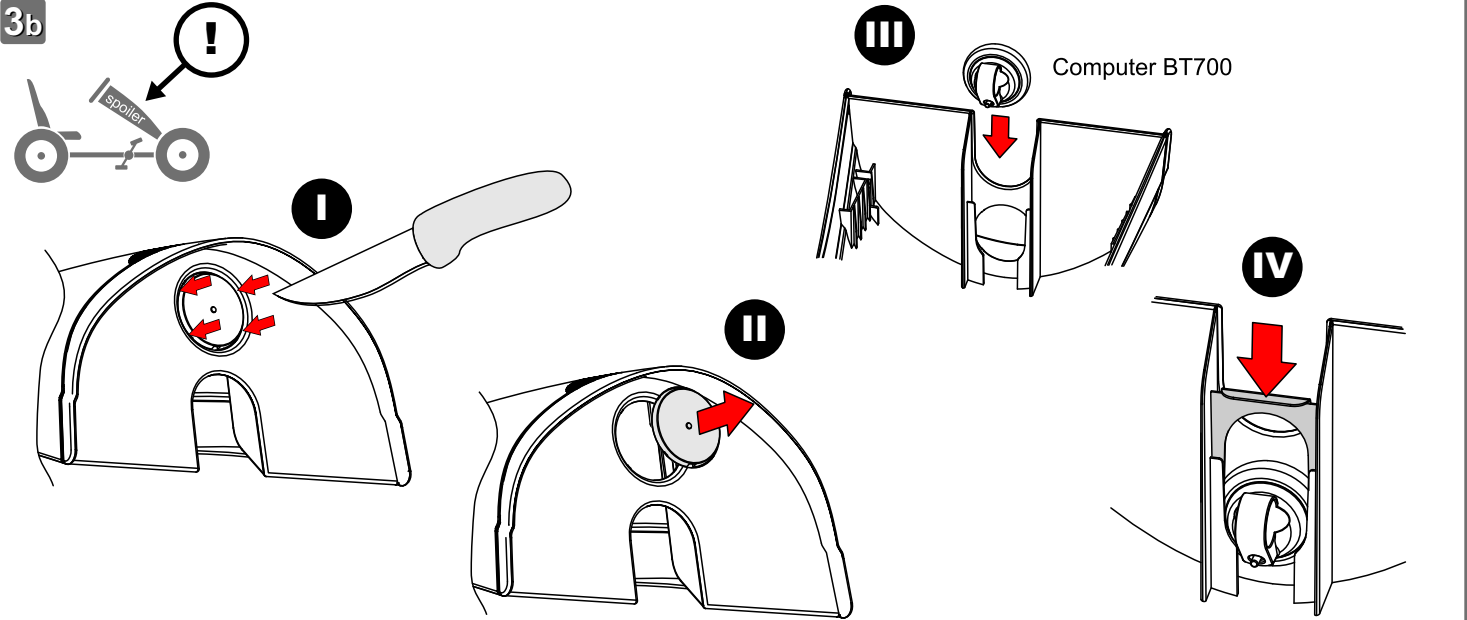

Ride time/stage Etappenfahrzeit Afgelegde rijdtijd Durée de l'étape	Set button Set-Taste Toets "Set" Touche "Set"	Kilometre/stage Etappenkilometer Afgelegd aantal kilometers Kilométrage de l'étape
Average speed Durchschnittsgeschwindigkeit Gemiddelde snelheid Vitesse moyenne		Digital clock Digitaluhr Digitale klok Montre numérique
Current speed Momentangeschwindigkeit Momentele snelheid Vitesse instantané	Function button Funktionstaste Functies kiezen Touche de fonction	Odometer Gesamtkilometer Totaal aantal kilometers Kilométrage général
		Maximum speed Maximalgeschwindigkeit Maximalsnelheid Vitesse maximale

**1**

Lithium Battery CR2032

**2**

**Start/Reset**

**3**

Click!

**4 Wheel Size**

Wheel size (mm) = D (mm) x 3,14

1 inch = 25,4 mm

**5 Set Wheel Size**

**6**

**Set**

**A**

**B**

**7**

**Set**

**Select Functions**

**Set/Reset Functions**

3 sec